

COSMOPOLITAN

SHAVER

COHR07

INSTRUCTION MANUAL

PRODUCT FEATURES

- | | |
|----------------|----------------------------------|
| 1. Mirror | 5. On/off indication (not shown) |
| 2. Blade cover | 6. Battery cover |
| 3. Blade | 7. Luxe bag |
| 4. Rotary head | 8. Tweezers |



Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this leaflet.

IMPORTANT SAFEGUARDS

Please read these instructions before operating this appliance and retain for future use.

FOR DOMESTIC USE ONLY

- This device is designed exclusively for domestic use. Only use this appliance for its intended use as described in this manual.
- This device is NOT a toy. Keep out of reach of young children younger than 8 years. Children should be supervised to ensure that they do not play with device. Cleaning and user maintenance shall not be made by children without supervision.
- This device can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- ✓ **ALWAYS** ensure that the main body of the appliance does not get wet (water splashing, etc.) and do not use with wet hands.
- ✓ **ALWAYS** consult your Doctor before use if you have a pacemaker.
- ✓ **ALWAYS** keep the skin dry and clean before using the device. Do not smear cream, lotion, gel, powder or antiperspirant etc. to avoid blocking the blade.
- ✓ **ALWAYS** use the appliance with the supplied attachments. If damaged, only replace it with one of the original type to avoid an electrical hazard.
- ✓ **ALWAYS** keep the device away from hot or heated surfaces and avoid direct sunlight.

- ✗ **NEVER** use the device if it is damaged or broken to avoid injuries.
- ✗ **NEVER** use the appliance on irritated skin (e.g. eczema or inflamed skin reactions such as folliculitis (purulent hair follicles), skin with varicose veins, rashes, spots, moles (with

hairs) or wounds without first consulting your Doctor. Persons with reduced immune response, during pregnancy or people who suffer from diabetes mellitus, haemophilia or immunodeficiency should also consult with their Doctor before use.

- ✗ **NEVER** use if you have allergic or sensitive skin that reacts to cosmetics, metals, etc. or when your skin has rashes, severe acne, recent scar tissue (less than 3 months) or is sunburned, inflamed, irritated or has other skin ailments. Consult your Doctor before use.
- ✗ **NEVER** use attachments other than those we supply.
- ✗ **NEVER** use the appliance if it is damaged or malfunctions.
- ✗ **NEVER** share use of the appliance. For hygiene reasons, the appliance should only be used by one person.
- ✗ **NEVER** use where any aerosol (spray) products are being used or where oxygen is being used.
- ✗ **NEVER** attempt to disassemble or modify the device as this places the user at risk and invalidates the guarantee.
- ✗ **NEVER** immerse the device in water.

BATTERIES

- This shaver operates with 1 x AA 1.5 V battery (not supplied). For best performance, use an alkaline battery.
- Always use the battery by the recommended use-by-date.
- Rotate and align the indent mark on the rose gold metal ring to the “▲” mark on the battery cover and remove the battery cover.
- Insert the battery ensuring that the battery is fitted the right way round observing the + and – signs on the battery and product.
- Replace the battery cover by aligning the indent mark and the “▲” mark on the battery cover.
- Rotate the battery cover to align the indent to the “0” position.
- Always seek medical advice immediately if you believe a battery has been swallowed.
- Always store batteries in a well ventilated cool dry place away from direct sunlight.
- Always keep batteries out of the reach of young children.
- Used batteries should not be disposed of with the household waste. Please recycle batteries at special collection points or return them to your retailer.
- Never place the battery in a fire or mutilate the battery as it may burst or release toxic materials.
- Never puncture, crush, dent or dismantle batteries or attempt to revive batteries by heating, charging or other means.
- If the appliance is not used for long periods of time, do not leave the battery

inserted (danger of leakage). Remove the battery when not in use for extended periods of time. In the instance of battery leakage occurring and coming into contact with the skin or eyes, wash immediately with lots of water.

DIRECTIONS FOR USE

1. The blade may get slightly hot during usage of the device. This is normal.
2. For best results use on hair which is ¼" in length or less.
3. Remove the blade cover.
4. Rotate the main body of the shaver so that the indent mark on the rose gold decorative ring is in aligned to the "I" position on the battery cover to turn the shaver on.
5. Gently place the blade flat against the skin and rotate or move around in small circles to remove hair.
6. Rotate the main body of the shaver so that the indent mark on the rose gold decorative ring is in aligned to the "O" position on the battery cover to turn the shaver off.
7. If the appliance starts to slow, carry out cleaning as described in the Cleaning and Maintenance section. If it is still running slowly, change the battery.

CLEANING AND MAINTENANCE

- To ensure optimum shaving results, carry out cleaning after each use.
- Do not wipe any part of the appliance with abrasive cleaning agents or aggressive liquids, such as petrol, benzene or alcohol.

The appliance is with waterproof protection. Only the removable rotary head and main body can be cleaned under an open tap. Please never immerse the appliance into the water for cleaning.

1. Turn off the appliance and remove the battery. Rotate the rotary head anti-clockwise to remove it.
2. Use clean water to rinse residue hair from the rotary head and main body, then take a small brush (not supplied) to remove any remaining hair.
3. Remove any excess water after cleaning with a clean cloth. Allow the rotary head and main body to air dry out of the reach of children to ensure it is completely dry.
4. Once completely dry, attach the rotary head back onto the main body aligning the indent on the rotary head to the left of the indent on the main body and turning clockwise to lock the 2 pieces into place. Place the blade cover back onto the appliance and store in a cool dry place.
5. Lubricate the blades with a drop of sewing machine oil every 6 weeks for optimal performance.

NOTES:

- Do not use a towel or paper towel to wipe the blade head, it may damage the blade and the connecting shaft.
- During the installing or removing of the blade head, ensure the battery cover is locked with the main body.
- Do not place the product at the sunlight or high temperature directly.

SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician to prevent a hazard.

REPLACEMENT HEADS

For optimum results we recommend that you replace the rotary head every 6 months or sooner if you experience a noticeable drop in performance, or if it becomes damaged in any way. For replacements please contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase, against mechanical and electrical defects, when registered at www.cosmobeautytools.com within 28 days of purchase. NB: Non-registered products are guaranteed for a period of 1 year. It is particularly important that you carefully read the instructions provided, in order to get maximum use from this product.

This guarantee is only valid if the appliance is used solely for domestic purposes

in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss.

In the unlikely event of a fault or mechanical defect in material and workmanship within the 12 months of purchase the product should be returned to the retailer for replacement.

If the fault develops after 12 months and within 24 months from the date of original purchase and you have registered your product online within 28 days of purchase, you should contact customer services quoting the products model number and batch code.

This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1825).

For spare parts please contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

Guarantee Exclusions

1. Batteries and damage from leakage is not covered by the terms of the guarantee.
2. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.
3. Consumable items such as brushes are not covered under this warranty.

This guarantee does not cover any claims for consequential loss or damage.

This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

For technical queries, please contact:

MPL Home Ltd IMEX, 575 - 599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, UK

Model: COHR07

UK Customer Helpline: 0345 467 6743

Made in China

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliance separately, the product is marked with crossed-out wheeled dustbin.

Cosmopolitan is marketed and distributed under license by MPL Home Ltd, HP2 7DX, UK COSMOPOLITAN IS A TRADEMARK OF HEARST COMMUNICATIONS, INC. © 2018 HEARST COMMUNICATIONS, INC. ALL RIGHTS RESERVED.

