


# COSMOPOLITAN

## FOOT SPA

COSPA04

### INSTRUCTION MANUAL

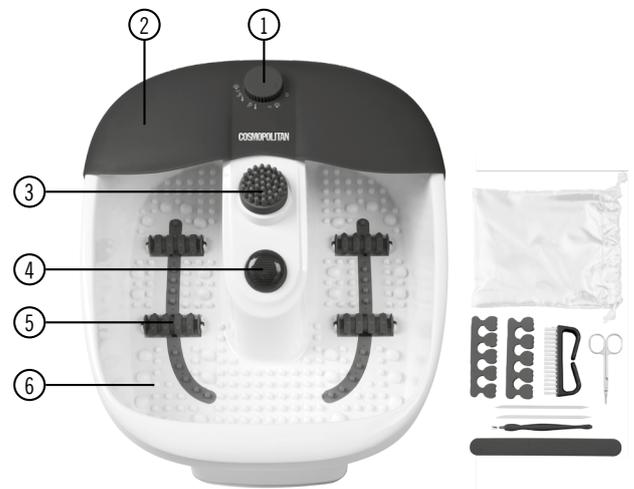

Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this leaflet.

### PRODUCT FEATURES

- |                             |                                |
|-----------------------------|--------------------------------|
| 1. Function selector        | 4. Infrared heat lamp          |
| 2. Splash guard             | 5. Massage rollers (removable) |
| 3. Massage head (removable) | 6. Massage nubs                |

## IMPORTANT SAFEGUARDS

Please read these instructions before operating this appliance and retain for future use.

### FOR DOMESTIC USE ONLY

To reduce the risk of fire, burns, electric shock or other injuries, careful study of the following important safety precautions is strongly recommended:

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable. Please consult your local electrician for advice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- ✓ **ALWAYS** use this appliance in accordance with the enclosed operating instructions.
- ✓ **ALWAYS** ensure before plugging in or unplugging the appliance that the function selector is in the OFF or "0" position.
- ✓ **ALWAYS** periodically check the cord for damage. If the supply cord is damaged it must be replaced by the manufacturer or qualified electrician to avoid electrical hazard. Never use the appliance if this happens. Disconnect immediately and contact the manufacturer.
- ✓ **ALWAYS** switch off the power supply and unplug from the mains socket before emptying, filling or moving it, when not in use and before cleaning.
- ✓ **ALWAYS** avoid positioning the product where the power cable may be accidentally damaged.
- ✓ **ALWAYS** check the temperature of the water you put in the foot spa before putting your feet into it.
- ✗ **NEVER** reach for an appliance that has fallen into water. Switch off at the mains and unplug it immediately and be sure not to touch the water. Do not reuse unless it has been inspected or approved by a qualified electrician.

- ✗ **WARNING:** Do not use this appliance near bathrooms, showers, basins or other vessels containing water and do not immerse in water or any other liquids.
- ✗ **NEVER** use if you feel discomfort, pain or irritation. Never use on swollen or inflamed feet or if you have any skin eruptions. Please consult your Doctor first.
- ✗ **NEVER** stand up in or on the unit.
  - Always ensure that the power cord is not placed under the appliance.
- ✗ **NEVER** use if you are sensitive to heat or have reduced feeling in your legs.
  - This foot spa has a hot surface so any user sensitive to heat must be careful when using.
- ✗ **NEVER** pull the unit by the cord or use the cord as a handle.
- ✗ **NEVER** place or store the foot spa where it can fall or be pulled into a bath or sink.
  - The foot spa can be used without water on massage and heat setting. See point 3 of **PREPARATIONS BEFORE USE**.
- ✗ **NEVER** switch on the appliance without having filled with water and do not switch on unless you intend to use.
- ✗ **NEVER** fall asleep whilst using the foot spa.
- ✗ **NEVER** attempt to plug or unplug the unit whilst your feet are immersed on the foot spa and in the water.
- ✗ **NEVER** immerse the product into water or other liquids for cleaning or other purposes.
- ✗ **NEVER** use outdoors and only use on a clean and flat surface.
- ✗ **NEVER** let young children play with the product.
  - The product should only be connected to a 220–240 V AC, 50/60 Hz electrical outlet.
- ✗ **DO NOT** use the product if it leaks, operates incorrectly, or is damaged in any way.
  - If water starts to leak out of the product, switch it off immediately, unplug it and do not use it until it has been repaired by competent service personnel using original spare parts.
- ✗ **NEVER** use if the plug is damaged in any way.
  - The product is only intended for personal domestic use and only in the manner described in this instruction manual.
  - The product is intended for indoor use only.
- ✗ **NEVER** dismantle the product. The product contains no replaceable parts.

