

COSMOPOLITAN

LUXE LED NAIL LAMP

COSPA06

INSTRUCTION MANUAL

PRODUCT FEATURES

1. ON/OFF button
2. 30s/60s/120s timer button
3. USB port
4. Luxe bag
5. Soak off gel polish remover nail clips



Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this leaflet.

IMPORTANT CAUTIONS AND WARNINGS

Please read all instructions before use and retain for future use.

This device is designed exclusively for domestic use. Only use this appliance for its intended use as described in this manual.


This device is NOT a toy. Keep out of reach of young children younger than 8 years. Children should be supervised to ensure that they do not play with device. Cleaning and user maintenance shall not be made by children without supervision.

This device can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Only use the appliance with the supplied USB cable. If damaged, only replace it with one of the original type to avoid an electrical hazard.

- ✓ **ALWAYS** unplug when not in use.
- ✓ **ALWAYS** keep the device away from hot or heated surfaces and avoid direct sunlight.
- ✗ **NEVER** use attachments other than those we supply.
- ✗ **NEVER** use the appliance if it is damaged or broken to avoid injuries.
- ✗ **NEVER** leave unattended when plugged in.
- ✗ **NEVER** allow nails or fingers to touch the LED bulbs when in use.
- ✗ **NEVER** attempt to disassemble or modify the device as this places the user at risk and invalidates the guarantee.
- ✗ **NEVER** stare directly at the light source.

✗ **NEVER** use this product if you have any open cuts on or around the cuticles or fungal nail infections.

✗  **WARNING:** Do not use this appliance near bathrooms, showers, basins or other vessels containing water and do not immerse in water or any other liquids.

- This device is NOT waterproof.

Keep these instructions safe for future reference.

OPERATION

When used with a power adaptor

Input: AC100-240V ~ 50/60Hz

Output: 5V --- 2A ⓄⓄⓄ

DIRECTIONS FOR USE

NAIL LAMP

1. Insert the small plug of the USB cable into the back of the nail lamp.
2. Plug the charging lead into the USB port. The nail lamp will make a beep sound and the LED indicator will be illuminated when the appliance is connected.
3. Press the ON/OFF button and the lamp will light up.
4. There are 3 built-in timers to select from: 30, 60 or 120 seconds. After you have selected the desired timer, place your hand into the nail lamp. The lamp will beep and automatically switch off when the time is up.
5. Press the ON/OFF button to switch the nail lamp off.

DIRECTION OF USE

SOAK OFF GEL POLISH REMOVER NAIL CLIPS

1. Soak cotton pad with acetone remover.
2. Place an acetone-soaked cotton pad on one nail. Ensure the pad is held securely covering the whole surface of each nail for the remover to be fully effective. Clip a gel polish removal nail clip over the top. The nail clips will hold the acetone-soaked cotton pad in place. Repeat this process on all 5 fingers.
3. Allow 10 – 15 minutes for soaking.
4. Remove the nail clips and cotton pads. The gel should begin to lift away from your natural nail plate. Use a manicure stick (not supplied) to gently remove the remaining gel. If the gel does not lift after 15 minutes, increase soak time by a further 10 – 15 minutes until the gel can be removed easily.

CLEANING AND MAINTENANCE

1. The appliance must be unplugged before cleaning.
2. Clean with a soft cloth or sponge moistened with a mild soap and water.
3. Dry thoroughly before use.
4. Do not use any harsh detergents, abrasives, solvents or cleaners.
5. Never immerse in water to clean.

SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician to prevent a hazard.

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase, against mechanical and electrical defects, when registered at www.cosmobeautytools.com within 28 days of purchase. NB: Non-registered products are guaranteed for a period of 1 year. It is particularly important that you carefully read the instructions provided, in order to get maximum use from this product.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss.

In the unlikely event of a fault or mechanical defect in material and workmanship within the 12 months of purchase the product should be returned to the retailer for replacement.

If the fault develops after 12 months and within 24 months from the date of original purchase and you have registered your product online within 28 days of purchase, you should contact customer services quoting the products model number and batch code.

This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1825).

For spare parts please contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

GUARANTEE EXCLUSIONS

1. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.
 2. Consumable items such as brushes are not covered under this warranty.
- This guarantee does not cover any claims for consequential loss or damage. This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.
- In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

For technical queries, please contact:

MPL Home Ltd IMEX, 575 - 599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, UK.

Model: COSPA06

 
UK Customer Helpline: 0345 467 6743

Made in China

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliance separately, the product is marked with crossed-out wheeled dustbin.

Cosmopolitan is marketed and distributed under license by MPL Home Ltd, HP2 7DX, UK. COSMOPOLITAN IS A TRADEMARK OF HEARST COMMUNICATIONS, INC. © 2018 HEARST COMMUNICATIONS, INC. ALL RIGHTS RESERVED.



COSPA06 06.2018

