

COSMOPOLITAN

EYELASH STYLER

COSPA07

INSTRUCTION MANUAL

PRODUCT FEATURES

1. ON/OFF button
2. LED indicator
3. USB charging port (not shown)
4. Double-sided comb attachment
 - a) Brush side with air
 - b) Comb side
5. Silicone brush attachment
6. Luxe bag



Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this leaflet.

IMPORTANT CAUTIONS AND WARNINGS

Please read all instructions before use and retain for future use.

THIS DEVICE IS DESIGNED EXCLUSIVELY FOR DOMESTIC USE.

Only use this appliance for its intended use as described in this manual. This device is NOT a toy. Keep out of reach of young children younger than 8 years. Children should be supervised to ensure that they do not play with device. Cleaning and user maintenance shall not be made by children without supervision.

This device can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

This product contains small parts that may present a choking hazard for young children.

- ✓ **ALWAYS** use the appliance with the supplied USB cable. If damaged, only replace it with one of the original type to avoid an electrical hazard.
- ✓ **ALWAYS** keep the appliance away from hot or heated surfaces and avoid direct sunlight.
- ✗ **NEVER** use attachments other than those supplied.
- ✗ **NEVER** use the appliance, attachments or the USB cable if it is damaged or broken to avoid injuries.
- ✗ **NEVER** use if you suffer from eye problems or have a history of eye problems, consult your Doctor before use.
- ✗ **NEVER** use if you have a migraine, headache or any related conditions.
- ✗ **NEVER** allow the heated comb to come into contact with the skin or surface of the eye.
- ✗ **NEVER** block the base of the eyelash styler with your hand as this will disrupt the airflow through the appliance.

- ✗  **WARNING:** Do not use this appliance near bathrooms, showers, basins or other vessels containing water and do not immerse in water or any other liquids.
- ✗ **NEVER** share the appliance with others for hygiene reasons.
- ✗ **NEVER** attempt to disassemble or modify the device as this places the user at risk and invalidates the guarantee.
 - This appliance is NOT waterproof.

KEEP THESE INSTRUCTIONS SAFE FOR FUTURE REFERENCE.

PREPARATIONS BEFORE USE

1. Insert the small plug of the USB cable into the base of the Eyelash Styler. The small plug of the USB cable will only connect into the base of the appliance one way round.
2. Plug the charging lead into the USB port.
3. The LED flashes in blue when charging. The blue LED remains illuminated when fully charged. Allow up to 5 hours for a full charge before using.
4. The Eyelash Styler will not operate if the charging lead is connected to a USB port.
5. The Eyelash Styler can operate for up to 40 minutes once fully charged.
6. If the appliance is not used for an extended period of time it is recommended to charge the battery once a month in order to experience the maximum life of the battery.

DIRECTIONS FOR USE

ON NATURAL EYELASHES

1. Apply your desired mascara.
2. Press the ON/OFF button to start the warm air setting. The LED indicator will glow orange to indicate the appliance is in the warm air setting.
3. Use the brush side (4A) of the double-sided comb attachment (4) and hold the heated brush attachment against the lashes and brush upwards from the root of your eyelashes until the mascara is dry.
4. Use the back of the double-sided comb attachment, the comb side (4B), to separate the eyelashes and prevent clumps using slow gentle strokes.
5. For a more defined curl, press the ON/OFF button again to start the cool air setting. The LED indicator will be in blue to indicate that it is in the cool air setting. Use the silicone brush attachment (5) and brush upwards until you reach the tip of your lashes, gently push the lashes back and hold the Eyelash Styler until you achieve your desired curl.

ON FALSE EYELASHES

1. Apply false eyelashes first before use.
2. Apply your desired mascara.
3. Press the ON/OFF button twice to start the cool air mode with blue LED indicator. Hold the comb attachment against the root of the lashes to separate and style the lashes.
4. For a more defined curl, use the silicone brush attachment (5) to style the lashes until you achieve your desired curl.

AUTOMATIC SHUTDOWN FEATURE

The Eyelash Styler will automatically shut down after approximately 150 seconds to protect the inbuilt battery. If a longer styling time is required, please restart the appliance to continue styling.

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTIONS
The appliance is not working, LED indicator is not ON.	The appliance is not charged, or it has low battery or automatic shutdown feature has activated.	<ol style="list-style-type: none">1. Follow the charging instructions to ensure that the appliance has been charged for 5 hours and the blue LED indicator stop blinking.2. If the automatic shutdown feature has activated, press the ON/OFF button to restart.
No warm air after turning on.	<ol style="list-style-type: none">1. The comb attachment is blocked.2. The warm air setting has not been selected.3. The ambient environment temperature is too low.	<ol style="list-style-type: none">1. Remove the attachment and clean to remove any build-up of dust, dirt or mascara residue.2. Press the ON/OFF switch to select warm air setting. The LED indicator will turn orange.3. Ensure the appliance is used indoors. The performance of the warm setting will be reduced if used outdoor in low temperatures.
No cool air after turning on	<ol style="list-style-type: none">1. The comb attachment is blocked.2. The cool air setting has not been selected.3. The waiting interval time between the settings is too long.	<ol style="list-style-type: none">1. Remove the attachment and clean to remove any build-up of dust, dirt or mascara residue.2. Press the ON/OFF switch to select cool air setting. The LED indicator will turn blue.3. Normally, cool airflow will start in 10-15 seconds after switching from the warm air setting to the cool air setting.

CLEANING AND MAINTENANCE

Always unplug the device before cleaning it. Wipe with a clean, dry cloth after each use. Wash the attachments in warm soapy water to remove any build up of dust, dirt or mascara. Regularly wipe the air intake at the base of the appliance with a clean cloth or brush to remove any build-up of dust, dirt or debris that would otherwise block the flow of air into the appliance.

After cleaning, store in a dry place.

SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician to prevent a hazard.

GURANATEE

This product is guaranteed for a period of 2 years from the date of purchase, against mechanical and electrical defects, when registered at www.cosmobeautytools.com within 28 days of purchase. NB: Non-registered products are guaranteed for a period of 1 year. It is particularly important that you carefully read the instructions provided, in order to get maximum use from this product.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an

unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss.

In the unlikely event of a fault or mechanical defect in material and workmanship within the 12 months of purchase the product should be returned to the retailer for replacement.

If the fault develops after 12 months and within 24 months from the date of original purchase and you have registered your product online within 28 days of purchase, you should contact customer services quoting the products model number and batch code.

This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1825).

For spare parts please contact Customer Services quoting the product's model number and batch code. They will give you up-to-date prices.

GUARANTEE EXCLUSIONS

1. Batteries and damage from leakage is not covered by the terms of the guarantee.
2. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.
3. Consumable items such as brushes are not covered under this warranty.

This guarantee does not cover any claims for consequential loss or damage.

This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

For technical queries, please contact:

MPL Home Ltd IMEX, 575 - 599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, UK.

Model: COSPA07

UK Customer Helpline: 0345 467 6743

Made in China

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliance separately, the product is marked with crossed-out wheeled dustbin.

Cosmopolitan is marketed and distributed under license by MPL Home Ltd, HP2 7DX, UK. COSMOPOLITAN IS A TRADEMARK OF HEARST COMMUNICATIONS, INC. © 2018 HEARST COMMUNICATIONS, INC. ALL RIGHTS RESERVED.

