

COSMOPOLITAN

MAKEUP BRUSH CLEANER AND DRYER

COSPA08

INSTRUCTION MANUAL

PRODUCT FEATURES

- | | |
|---|--------------------|
| 1. 8 silicone collars (3mm, 5mm, 7mm, 10mm, 15mm, 18mm, 24mm, 30mm) | 3. Splashguard lid |
| 2. Spindle | 4. Bowl |
| | 5. Base |
| | 6. Battery cover |



Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this leaflet.

IMPORTANT CAUTIONS AND WARNINGS

Please read all instructions before use and retain for future use.

THIS DEVICE IS DESIGNED EXCLUSIVELY FOR DOMESTIC USE. ONLY USE THIS APPLIANCE FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL.

This device is NOT a toy. Keep out of reach of young children younger than 8 years. Children should be supervised to ensure that they do not play with device. Cleaning and user maintenance shall not be made by children without supervision.

This device can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Only use the appliance with the supplied attachments. If damaged, only replace it with one of the original type to avoid an electrical hazard.
- Only use cleaning solutions as detailed under 'Directions for use'.
- ✓ **ALWAYS** keep the device away from hot or heated surfaces and avoid direct sunlight.
- ✗ **NEVER** use attachments other than those we supply.
- ✗ **NEVER** use the appliance if it is damaged or broken to avoid injuries.
- ✗ **NEVER** attempt to disassemble or modify the device as this places the user at risk and invalidates the guarantee.
- ✗ **WARNING:** Do not use this appliance use this product near bathrooms, showers, basins or other vessels containing water and do not immerse in water or any other liquids.
- This device is NOT waterproof.

Keep these instructions safe for future reference.

BATTERIES

- This makeup brush cleaner operates with 2 x AAA 1.5 V batteries (not supplied). For best performance, use an alkaline battery.
- Always use the battery by the recommended use-by-date. Install 2 x AAA batteries at correct direction, ensuring that the battery is fitted the right way round observing the + and - signs on the battery and product.
- Always seek medical advice if you believe a battery has been swallowed.
- Always store batteries in a well ventilated cool dry place away from direct sunlight.
- Always keep batteries out of the reach of young children.
- Used batteries should not be disposed of with the household waste. Please recycle batteries at special collection points or return them to your retailer.
- Never place the battery in a fire or mutilate the battery as it may burst or release toxic materials.
- Never puncture, crush, dent or dismantle batteries or attempt to revive batteries by heating, charging or other means.
- If the appliance is not used for long periods of time, do not leave the battery inserted (danger of leakage). Remove the battery when not in use for extended periods of time. In the instance of battery leakage occurring and coming into contact with the skin or eyes, wash immediately with lots of water.

DIRECTIONS FOR USE

1. Place all the collars into the base. This allows brushes to fit much easier into the collars.
2. Select the makeup brush and push the brush into the best fitting collar until it is firmly held in place and straight.
3. Remove the collar and brush from the base. Put the spindle of the makeup brush cleaner unit at the bottom of the collar. Check the spindle, collar and brush are attached securely and are in a straight line.
4. a) For water-soluble makeup such as loose powder, fill the bowl with 4ml of your preferred anti-bacterial liquid soap mixed with water into the bowl. Always ensure the solution level is less than half the height of the brush bristles you wish to clean.
b) For non-water soluble makeup such as liquid foundation, add your 4ml preferred shampoo mixed with water or makeup cleanser (not supplied) into the bowl. Always ensure the solution level is less than half the height of the brush bristles you wish to clean.
5. Gently dip the brush up and down in the liquid to slightly separate the bristles. Work the liquid into the bristles for 5 seconds. Do not allow the metal ferrule of the brush to come into contact with the solution.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

For technical queries, please contact:

MPL Home Ltd., IMEX, 575 - 599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, UK.

Model: COSPA08

UK Customer Helpline: 0345 467 6743

Made in China

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliance separately, the product is marked with crossed-out wheeled dustbin.

Cosmopolitan is marketed and distributed under license by MPL Home Ltd, HP2 7DX, UK. COSMOPOLITAN IS A TRADEMARK OF HEARST COMMUNICATIONS, INC. © 2018 HEARST COMMUNICATIONS, INC. ALL RIGHTS RESERVED.

6. After 5 seconds, switch on the makeup brush cleaner unit. Gently lift the brush up and down, keeping the brush underneath the solution at all times; ensure the spindle, collar and brush are in a straight line. If they are not aligned, the brush may wobble from side to side and rattle against the bowl.
7. After a further 10 seconds slowly lift the spinning brush out of the liquid but still remaining inside the bowl. Leave the brush to spin above the solution level to spin dry.
8. After a further 10 seconds switch the unit off. **DO NOT** over-spin as this may damage and misshape the brush. We do not recommend spinning the brush continuously for more than 10 seconds.
9. If the brush is still not dry enough, repeat step 7 and check if the brush is still wet. Shape the bristles using your fingers if necessary.
10. When finished detach the collar from the spindle and remove the brush from the collar. Remove the splashguard lid from the bowl. Discard the remaining solution; clean and dry the bowl before storage.

SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician to prevent a hazard.

GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase, against mechanical and electrical defects, when registered at www.cosmobeautytools.com within 28 days of purchase. NB: Non-registered products are guaranteed for a period of 1 year. It is particularly important that you carefully read the instructions provided, in order to get maximum use from this product.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss.

In the unlikely event of a fault or mechanical defect in material and workmanship within the 12 months of purchase the product should be returned to the retailer for replacement.

If the fault develops after 12 months and within 24 months from the date of original purchase and you have registered your product online within 28 days of purchase, you should contact customer services quoting the products model number and batch code.

This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1825).

For spare parts please contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

 
GUARANTEE EXCLUSIONS

1. Batteries and damage from leakage is not covered by the terms of the guarantee.
2. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.
3. Consumable items such as brushes are not covered under this warranty.

This guarantee does not cover any claims for consequential loss or damage.

This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.



COSPA08 06.2018

