

COSMOPOLITAN

FACIAL CLEANSING BRUSH

COSPA09

INSTRUCTION MANUAL

PRODUCT FEATURES

- | | |
|-----------------------------|------------------------|
| 1. Compact storage case | 5. LED light indicator |
| 2. Normal brush | 6. ON/OFF button |
| 3. Deep cleansing brush | 7. Battery cover |
| 4. Silicone cleansing brush | 8. Luxe bag |



Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this leaflet.

IMPORTANT CAUTIONS AND WARNINGS

Please read all instructions before use and retain for future use.

THIS DEVICE IS DESIGNED EXCLUSIVELY FOR DOMESTIC USE. ONLY USE THIS APPLIANCE FOR ITS INTENDED USE AS DESCRIBED IN THIS MANUAL.

This device is NOT a toy. Keep out of reach of young children younger than 8 years. Children should be supervised to ensure that they do not play with device. Cleaning and user maintenance shall not be made by children without supervision.

This device can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- ✓ **ALWAYS** keep the device away from hot or heated surfaces and avoid direct sunlight.
- ✗ **NEVER** use attachments other than those we supply.
- ✗ **NEVER** use the appliance and attachments if it is damaged or broken to avoid injuries.
- ✗ **NEVER** attempt to disassemble or modify the device as this places the user at risk and invalidates the guarantee.
- ✗ **NEVER** immerse in water or any other liquids.

Keep these instructions safe for future reference.

BATTERIES

- This facial cleansing brush operates with 2 x AA 1.5 V batteries (not supplied). For best performance, use alkaline batteries.
- Always use the battery by the recommended use-by-date.
- Remove the battery cover and install 2 x AA batteries, ensuring that the battery is fitted the right way round observing the + and - signs marked on the battery and product.
- Always seek medical advice immediately if you believe a battery has been swallowed.
- Always store batteries in a well ventilated cool dry place away from direct sunlight.
- Always keep batteries out of the reach of young children.
- Used batteries should not be disposed of with the household waste. Please recycle batteries at special collection points or return them to your retailer.
- Never place the battery in a fire or mutilate the battery as it may burst or release toxic materials.
- Never puncture, crush, dent or dismantle batteries or attempt to revive batteries by heating, charging or other means.
- If the appliance is not used for long periods of time, do not leave the battery inserted (danger of leakage). Remove the battery when not in use for extended periods of time. In the instance of battery leakage occurring and coming into contact with the skin or eyes, wash immediately with lots of water.

BRUSH HEADS

To remove the brush head, simply grip the hand piece firmly with one hand and pull the brush head out and away from the hand piece.

To attach the brush head, push down the brush head down onto the hand piece until it clicks into place.

Replace the brushes every 3 months for optimum cleansing and exfoliation results. Replace the brush if the deformed bristles can no longer be restored to their original shape. Worn bristles will move impurities around rather than remove them, as well as irritate your skin.

To order replacement brush heads, please visit www.cosmobeautytools.com for more details or contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

Only replacement brush heads recommended by us should be used with this product.

PREPARATION BEFORE USE

The Facial Cleansing Brush features two speeds to adjust the intensity of the cleansing action.

- **Low Speed:** This speed is automatically activated when the appliance is turned on. The upper half of the LED indicator will be illuminated.
- **High Speed:** This speed is activated after you press the ON/OFF button a second time after tuning on. Both parts of the LED indicator will be illuminated.

DIRECTIONS FOR USE

CLEANSING

The normal and silicone brushes are recommended for daily cleansing use.

Remove makeup as normal. Do not use the Facial Cleansing Brush to remove eye makeup. If you use the Facial Cleansing Brush to remove face makeup, make sure to clean the brush afterwards as makeup can stain the brush.

Apply the cleansing brush of choice to the hand piece (normal or silicone cleansing brush).

Dampen the face, neck and neckline.

Dampen the brush head and apply the cleansing product of your choice to the desired areas.

Switch the Facial Cleansing Brush on using the ON/OFF button. Press once for low speed and press twice for high speed.

Cycle will start immediately.

Slide the brush over different areas as described using gentle circular movements. Do not press the brush head into the skin. Do not use around the sensitive skin area around the eyes.

Use the normal or silicone cleansing brush for 1 minute twice daily for best results. Press the ON/OFF button to turn the Facial Cleansing Brush off. Rinse the face and neck area with water.

EXFOLIATION

The deep cleansing brush is recommended for use once a week for exfoliation.

Remove makeup as normal. Do not use the Facial Cleansing Brush to remove eye makeup.

Apply the deep cleansing brush to the hand piece.

Dampen the face, neck and neckline.

Dampen the brush head and apply the cleansing or exfoliation product of your choice to the desired areas.

Switch the Facial Cleansing Brush on using the ON/OFF button. Press once for low speed and press twice for high speed.

Cycle will start immediately.

Slide the brush over different areas as described using gentle circular movements.

Use the silicone cleansing brush for 1 minute once a week for best results.

Do not use around the sensitive skin area around the eyes.

Press the ON/OFF button to turn the Facial Cleansing Brush off. Rinse the face and neck area with water.

CLEANING AND MAINTAINENCE

Clean the appliance and all brushes each time after use. Do not use any alcohol, acetone, abrasive cleaners, etc. to clean the housing of the appliance.

Rinse brushes with tap water. The maximum water temperature should not exceed 50°C.

Make sure to thoroughly rinse the bristles on brushes. Clean the hand piece as needed with a moist clean cloth. Dry with a clean towel.

When dry, place all contents into the case for storage.

Do not place any parts in a dishwasher for cleaning.

SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician to prevent a hazard.

GURANTEE

This product is guaranteed for a period of 2 years from the date of purchase, against mechanical and electrical defects, when registered at www.cosmobeautytools.com within 28 days of purchase. NB: Non-registered products are guaranteed for a period of 1 year. It is particularly important that you carefully read the instructions

provided, in order to get maximum use from this product.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply, dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

This guarantee is only valid with your original sales receipt as proof of purchase. You may wish to attach the receipt to this card for ease of reference and to avoid accidental loss.

In the unlikely event of a fault or mechanical defect in material and workmanship within the 12 months of purchase the product should be returned to the retailer for replacement.

If the fault develops after 12 months and within 24 months from the date of original purchase and you have registered your product online within 28 days of purchase, you should contact customer services quoting the products model number and batch code.

This information can be located on the underside or back of the product. The batch code will be stated in an YYWW format (e.g. 1825).

For spare parts please contact customer services quoting the product's model number and batch code. They will give you up-to-date prices.

GUARANTEE EXCLUSIONS

1. Batteries and damage from leakage is not covered by the terms of the guarantee.
2. The warranty does not cover acts of God such as fire, floods, hurricanes or tornadoes or use for rental or commercial services.
3. Consumable items such as brushes are not covered under this warranty.

This guarantee does not cover any claims for consequential loss or damage.

This guarantee is only valid within the UK and Ireland. Nothing in this guarantee or the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous product development we reserve the right to change the product, packaging and documentation specifications without notice.

ALL MPL HOME PRODUCTS ARE INTENDED FOR DOMESTIC USE ONLY

For technical queries, please contact:

MPL Home Ltd IMEX, 575 - 599 Maxted Road, Hemel Hempstead, Herts, HP2 7DX, UK.

Model: COSPA09

UK Customer Helpline: 0345 467 6743

Made in China

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliance separately, the product is marked with crossed-out wheeled dustbin.

Cosmopolitan is marketed and distributed under license by MPL Home Ltd, HP2 7DX, UK. COSMOPOLITAN IS A TRADEMARK OF HEARST COMMUNICATIONS, INC. © 2018 HEARST COMMUNICATIONS, INC. ALL RIGHTS RESERVED.



COSPA09 06.2018

